




Only use appliance  
after first reading these  
instructions!

Operating instructions

Heat pump dryer

Spirit topLine 830

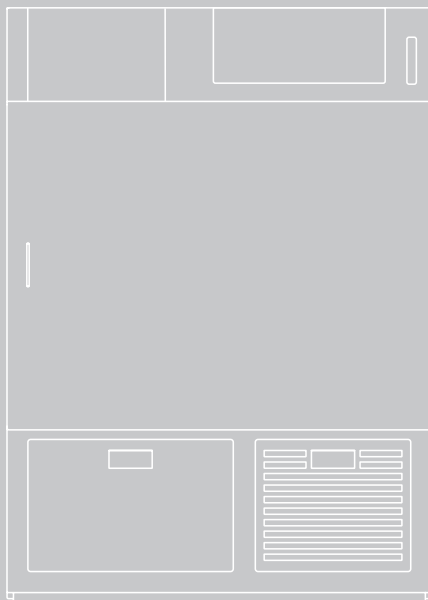

## Symbols



Please read the instructions.



Warnings are marked with a warning triangle.

The text gives information how a dangerous situation can be avoided.

Signal words indicate the severity of the danger, if not avoided.



### **Warning**

means that possible personal injuries, and potentially life-threatening injuries may occur.



### **Important**

means property damages may occur.

## **Dear Customer**

We are pleased that you have chosen a Schulthess dryer.

Your new dryer is the result of many years of development work.

The highest quality requirements, both in development and manufacture, guarantee along lifetime.

Its design meets all the demands of modern laundry care and offers you a varied and individual choice of programmes.

Sparing use of energy and short drying times help to ensure that you can use your dryer as economically as possible.

Please read these instructions carefully to enable you to use all the possibilities and advantages of your new dryer.

Please note in particular the safety informations and the enclosed guarantee and customer services booklet.

We hope you will be very happy with your new Schulthess dryer.

**Your  
Schulthess Maschinen AG**

# Contents

---

<b>Safety and safety measures</b> .....	6
<b>Disposal</b> .....	10
<b>Tips for drying</b> .....	10
Environmentally compatible drying .....	11
Observe before first use .....	11
<b>Machine description</b> .....	12
<b>Drying</b> .....	14
Preparing the appliance .....	14
Selecting programme and starting .....	14
Changing the programme .....	15
Interrupting the programme .....	16
Cancelling the programme .....	16
Adding more laundry .....	17
Programme end .....	17
Cleaning the fluff filters .....	18
Cleaning the air filter .....	20
Switching off the machine .....	21
<b>Programme survey</b> .....	22
Most efficient programme for cotton textiles .....	22
Cotton and line .....	22
Easy care laundry .....	23
Time drying .....	24
Additional programmes .....	24
<b>Special programmes</b> .....	26
Mixed laundry .....	26
Additional programmes .....	26
<b>Programme options</b> .....	26
Antibac .....	26
Gentle plus .....	26
Reverse + .....	27
Time preset .....	27
Drying + .....	27
Time .....	28
Express .....	28
ECO .....	28

---

<b>Settings</b> .....	29
Language (temporarily) .....	29
Menu Settings .....	30
More settings .....	31
<b>Cash-Card / Prepaid Card</b> .....	33
<b>Cleaning and Maintenance</b> .....	34
Cleaning the machine .....	34
Cleaning the filter holder .....	34
Cleaning the moisture sensor .....	35
Emptying for frost protection or transport .....	35
Self-cleaning .....	35
<b>Problems</b> .....	36
<b>Technical specifications</b> .....	41
<b>Customer service</b> .....	42
<b>Warranty subscription</b> .....	42

# Safety and safety measures

---

The enclosed documents contain important information on the installation, use and safety of the dryer. Keep the documents safe for other users or subsequent owners.

- ▶ Read the instructions carefully before operating the machine.
- ▶ Keep the instructions near the machine for further reference.

This machine meets the stringent safety regulations for electronic devices.

- ▶ Please observe the safety instructions in the operating and installation instructions.

## Use in accordance with the intended purpose

The dryer is suitable exclusively for the drying of household textiles. The machine may be operated by children 8 years or older and adults with impaired physical, sensory or mental capabilities or lack of experience and knowledge, if they are supervised or have been instructed regarding the safe use of the machine and understand the dangers resulting from the use of the machine. Do not let children play with the machine.

Do not let children carry out cleaning and user maintenance without supervision.

## Safety while handling and operating

### Warning

Danger of electric shock!

- ▶ Do not connect an appliance which displays visible damage.
- ▶ Only touch the main switch with dry hands.
- ▶ Only pull the plug, do not pull the cable.
- ▶ Under no circumstances spray the machine with water or clean it with a steam cleaner.

Repair work may only be executed by qualified and trained personnel and defective components may only be replaced with original spare parts by the original equipment manufacturer. Inexpert repairs or non-original parts can cause considerable property damage and risk to the user. Modifications to the appliance are only admissible after consultation with the manufacturer.

- ▶ If the mains supply cable is damaged, it must be replaced by a qualified specialist with the corresponding replacement cable (available from manufacturer or customer service)

- ▶ Always unplug the machine from the power source before carrying out maintenance work.
- ▶ If the machine is not needed for a longer period of time, disconnect it from the power supply.

### **Warning**

Risk of injury!

Climbing onto the dryer may cause it to tip and cause injuries.

- ▶ Never climb onto the appliance.
- ▶ Do not sit, lean or support yourself on the loading door.

Reaching into the turning drum may cause injury to hands.

- ▶ Do not reach into the rotating drum.
- ▶ Wait until the drum stops turning.

Components sticking out from the machine (e.g. loading door) may break off and cause injuries, when used for lifting.

- ▶ Do not lift the machine on protruding components.

When a drying cycle is stopped early, the heat and moisture of the laundry can cause burns when comes in contact with the skin.

- ▶ Appropriate hand protection is therefore to be worn.
- ▶ Remove the laundry quickly and spread it out so that the heat can be given off.

If a puddle forms on the floor near the appliance (hose tear, leak, etc.), wipe it dry and eliminate the cause (see **Problems**).

### **Warning**

Risk of fire!

Items containing heat sensitive substances can ignite during the drying process.

- ▶ Never dry laundry in your dryer that has been cleaned with industrial chemicals or treated with flammable solvents, such as stain removers, benzene etc.
- ▶ Wash laundry items soiled with cooking oil, acetone, alcohol, gas, petroleum, kerosene, stain remover, turpentine, wax or wax remover, in warm water with extra laundry detergent.
- ▶ Do not dry textiles in the dryer which have been in contact / covered with setting lotion, nail polish remover or similar agents.
- ▶ Do not dry items made of foam rubber (latex foam rubber), shower caps, waterproof textiles, rubberised articles, as well as garments or pillows filled with foam rubber flakes in the dryer.
- ▶ Remove all objects, such as e.g. lighters and matches.
- ▶ Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

## Safety for children

### **Warning**

Risk of injury!

Children are in danger of injury or life-threatening situations, when playing with the machine.

- ▶ Keep children under 3 years of age away from the machine, when not closely supervised.
- ▶ Never permit children to play in, on or near the dryer.
- ▶ Activate the child lock, if necessary.

Children may lock themselves in the machine – this is a life-threatening situation.

Ensure that an old appliance can no longer be used:

- ▶ Disconnect the mains cable.
- ▶ Cut through the mains cable and remove cable and plug.
- ▶ Destroy or remove the door lock.

When playing with packaging material / film and packaging parts, children may become entrapped in it or pull these over their head and suffocate.

- ▶ Keep packaging material away from children.

## Safety during installation

### **Warning**

Risk of injury!

If the machine is to be placed on a plinth, it must be mounted according to the installation instructions, otherwise this involves danger of tipping or falling.

- ▶ Have the machine installed according to the mounting instructions by qualified and trained personnel.
- ▶ Do not connect an appliance which displays visible damage.
- ▶ When installing as a washer-dryer tower combination, use a stacking kit to secure the dryer.



## Observe when drying

The fluff filters must be inserted when operating this machine.

- ▶ Never operate the machine with damaged fluff filters.
- ▶ Keep the area surrounding the dryer free of dust and fluff.
- ▶ The fluff filters must be cleaned regularly. Fluff may compromise and destroy the heat exchangers.

The maximum load is 8 kg of dry textiles.

- ▶ Dry clean laundry in the dryer only.
- ▶ Before starting a programme, make sure that there is no foreign object in the drum.
- ▶ Keep pets away from the machine.

A drying procedure should always end with fully completed cooling-off, so that the laundry items remains at a temperature that does not damage them.

- ▶ If a drying cycle is ended prematurely without cooling-off, all of the laundry must be removed quickly and spread out so that the heat can be given off.  
Caution: when a drying cycle is stopped early, the heat and moisture of the laundry can cause burns when it comes into contact with the skin. Make sure to wear appropriate hand protection.

# Disposal

---

## Packaging from your new machine

All packaging materials used are environmentally friendly and reusable. All card is made of 80 – 100 % recycled paper. Wood is not chemically treated. Films are made of polyethylene (PE), banding is made of polypropylene (PP) and the corner protection is made of polystyrene (PS). These materials are pure hydrocarbon compounds and are recyclable.

Return the packaging to the retailer or supplier.

Dispose of all packaging materials properly. Processing and reuse saves raw materials and reduces waste volumes.

## Disposal of your old machine

Please do not keep your old machine and under no circumstances dispose of it in your normal waste. The old machine contains valuable materials which should be sent for recycling.

Components from your old machine must not be reused. Please ensure that your old machine is disposed of properly. In this way you can help to ensure environmentally friendly disposal and/or recycling methods.

Additional information on the recycling of this product can be obtained from your commune, your waste disposal

# Tips for drying

---

## Sorting the laundry

Follow the care symbols in the fabrics. To achieve even drying results, sort the laundry by fabric type and desired level of dryness.



Dry at normal temperature



Dry at low temperature



Do not tumble dry

Dry wool or textiles containing wool with the special programme **Wool Finish** only (risk of felting).

---

## Notice

Textiles with metal reinforcements can damage the components of the machine and must not be dried in the dryer.

---

## Preparing the laundry

- ▶ Do up all zips, hooks and eyes.
- ▶ Button up duvet covers and pillowcases. Tie together loose belts, apron strings etc.

## Drying the laundry

- ▶ Remove easy care laundry from the dryer in a slightly damp state if possible (**Slightly dry**) and allow to finish drying in the air. Over drying causes creases.
- ▶ Laundry which is still too damp after drying a load of widely varying fabrics can be dried further using the programme **Time drying**.
- ▶ Knitted fabrics, e.g. jersey underwear, can shrink slightly during drying. Do not use the **Extra Dry** programmes for these fabrics.
- ▶ Dry sensitive fabrics such as silk and synthetic curtains with the special programme **Synthetics** only (risk of creasing).
- ▶ For drying single pieces of laundry select the programme option **Express** or a **Timed drying** programme.

## Environmentally compatible drying

---

### Notice

Dripping wet laundry: waste of energy!

---

- ▶ Remove as much water as possible from the laundry before drying by spinning in a washing machine or spin dryer. The higher the spin speed, the shorter the drying time and lower the energy consumption.
- ▶ You should also spin easy care laundry.

---

### Notice

Overfilling affects the drying result and severely creases the laundry.

- ▶ Do not exceed the maximum load.
- 

Small loads are uneconomical and result in increased wear of laundry and machine.

- ▶ If possible, always load the dryer with the maximum load.


## Observe before first use









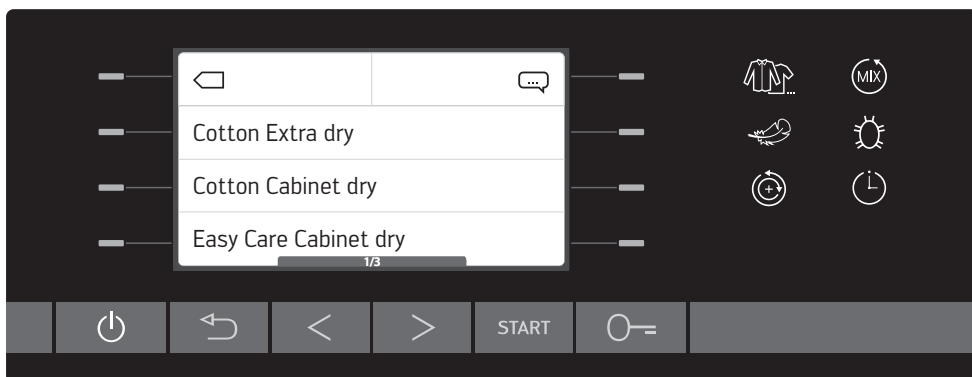




- ▶ Install the machine according to the installation instructions.
- ▶ Wipe the inside of the drum with a damp cloth.

# Machine description

---






- |   |                                 |  |                       |
|---|---------------------------------|--|-----------------------|
|    | On / Off                        |   | Additional programmes |
|    | Back in the menu                |   | Mixed laundry         |
|    | Scroll backwards                |   | Gentle plus           |
|    | Scroll forwards                 |   | Antibac               |
| <b>START</b>  | Start programme                 |   | Reverse +             |
|    | Open the door                   |  | Time preset           |
|  | Standard programme              |  |                       |
|  | Language (temporary) / Settings |  |                       |
| <b>1/3</b>  | Page number programme menu      |  |                       |


# Drying


## Preparing the appliance

- ▶ Check whether the fluff filters are in place (see **Drying / Clean fluff filters**).
- ▶ Switch on the power supply.


### Turn on machine

- ▶ Press button **On / Off** . After starting, the main menu is displayed.

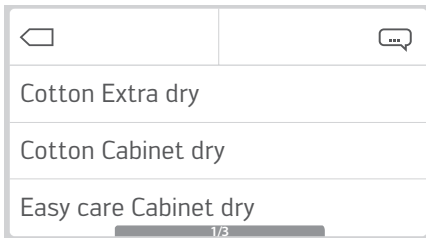


- ▶ Additional menu pages can be opened by pressing the arrow button **Scroll forwards** .

### Opening the door

- ▶ Press button **Open the door** . The loading door springs open.
- ▶ The door can be opened manually at any time by pressing against the door near the locking latch.


## Selecting programme and starting

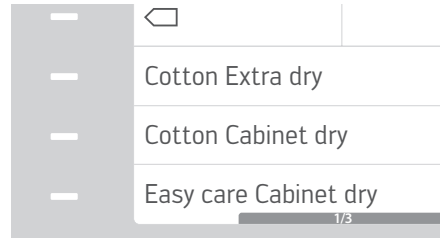

- ▶ Select the desired programme by tapping the light bar. The display shows the programme selected with programme duration, maximum load as well as additional selectable options.
- ▶ Select the desired programme options and put the laundry in the machine.

## Select programme options

The individual options are described in the chapter **Programme options**.

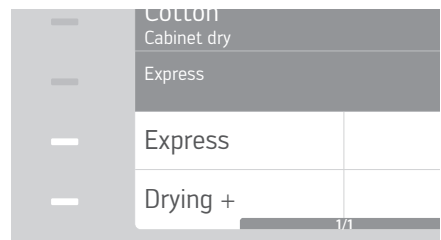

- ▶ Select the desired option/s by pressing the light bar or the corresponding symbol.
- ▶ Selected options change colour and are shown in the upper part of the display.
- ▶ If necessary, cancel the selection by tapping the light bar again.

## Adding laundry

- ▶ Make sure that there is no foreign body in the drum (coins, nails, paper clips, etc.).
- ▶ Distribute the laundry evenly in the drum.
- ▶ Mix large and small laundry items.

## Closing the door

- ▶ Close the door by pushing it until the lock audibly engages.
- ▶ Ensure that no items of laundry are trapped between the door and the rubber seal.



## Starting the programme


- ▶ Press button **START**.

### Prepaid Card / CashCard


Card operated machines do not begin operating until payment has been debited (see **Cashcard / PrePaid Card**).

## Changing the programme


### Changing the programme before programme start


- ▶ Return to the main menu with the button  **Back in the menu**.
- ▶ Repeat the selection of programmes and options.

### Changing the programme after programme start

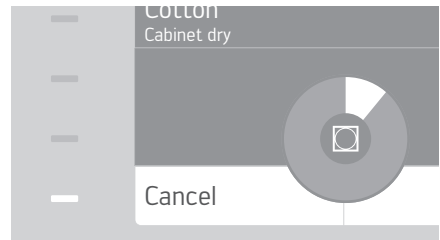


- ▶ Press the light bar next to **Cancel** until **End** is displayed.

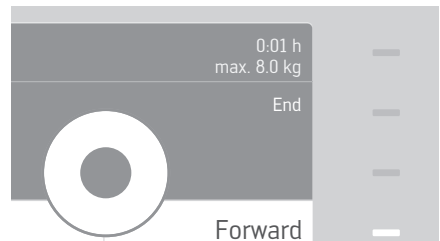


- ▶ Return to the main menu with the button  **Back in the menu**.
- ▶ Repeat the selection of programmes and options.
- ▶ Press button **START**.

## Skipping to the next programme step

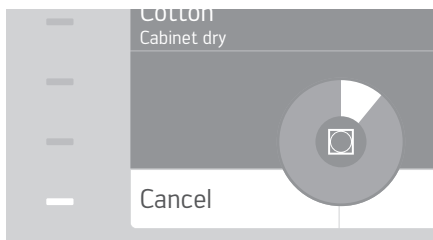


- ▶ Press the light bar next to **Forward** until the desired programme step is displayed.

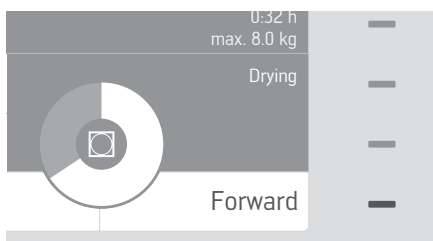


## Interrupting the programme

- ▶ Press button **On / Off**  until the following window is displayed:

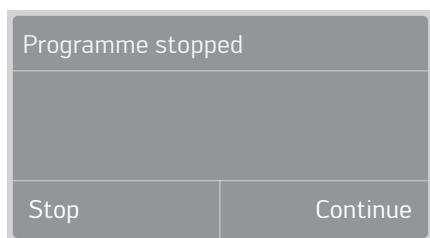


- ▶ Press the light bar next to **Stop**, to end the programme. To resume the programme, press the light bar next to **Continue**.

## Cancelling the programme

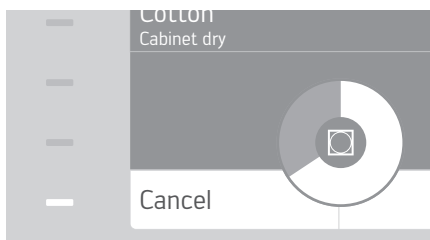

- ▶ Press the light bar next to **Cancel** until **End** is displayed.

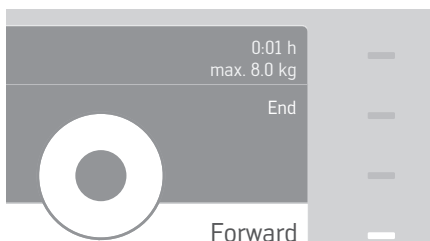

The programme will end.

- ▶ After cancelling, remove washing immediately and spread it out so that it can cool down.

---

### Notice


Regular self-cleaning at the end of the programme prolongs the life-cycle of the machine and ensures drying results are good long-term.

- ▶ Try not to make a habit of cancelling the programme, as this also cancels the self-cleaning process.
-




## Adding more laundry

- ▶ Press button **Open the door**  (is not lit!).

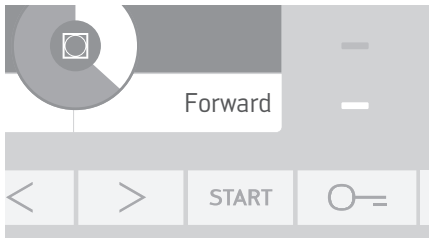


The programme is stopped.

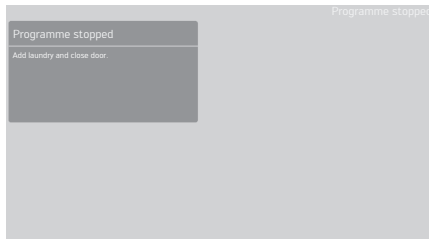

- ▶ Follow the directions on the display.

## Programme end


The programme end is shown.

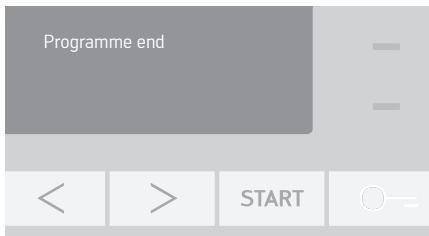


When crease protection is turned on, the drum continues to turn in short intervals after programme end (see **Settings / Anti-crease**).

The door can be opened.

## Remove the laundry

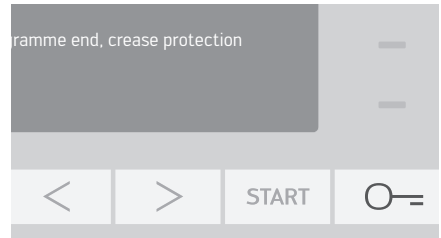

- ▶ Press button **Open the door** .
- ▶ Remove the laundry.
- ▶ Clean the fluff filters.


## Cleaning the fluff filters

When fabrics are used, the fibres are rubbed (laundry fluff), which are released when the fabrics are dried, collecting in the fluff filters in the door opening. Clogged fluff filters may affect the drying process.





- ▶ Clean filter **A** and **B** regularly.

### Clean the fluff filter **A** after every drying programme

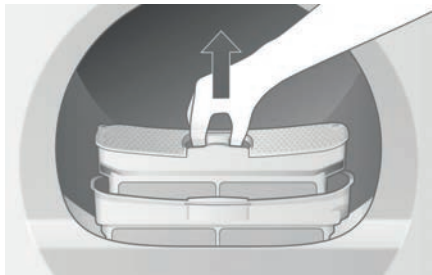

- ▶ Pull out the inner, fine filter **A** and swing it open.

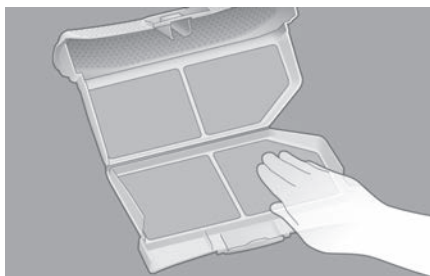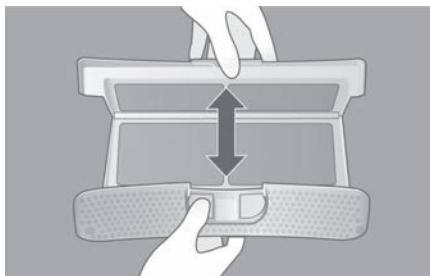

- ▶ Rub your hand over the inside of the filter to remove the fluff.
- ▶ Replace the fluff filter and make sure it is in the correct position.


---

### Notice


It may happen that a supposedly proper cleaned filter becomes impermeable, due to a fine, invisible coat remaining in the filter meshes.

- ▶ Pour a little water on to the inside of the filter. If it is impermeable, clean the filter with a brush under running water.
-

### Cleaning the filter **B** daily

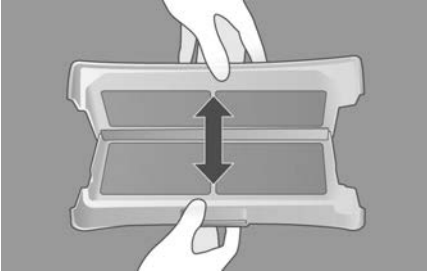

- ▶ Pull out the outer coarse filter **B** and swing it open.

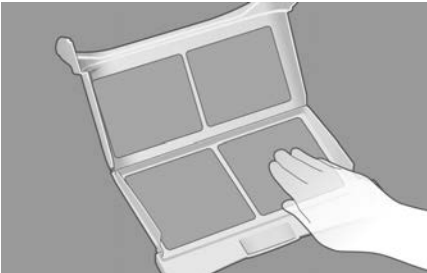


- ▶ Rub your hand over the inside of the filter to remove the fluff.
- ▶ Replace the fluff filter and make sure it is in the correct position.

### Descaling the fluff filters


If the coat cannot be brushed away, a commercial descaler spray must be used to dissolve it.

- ▶ Spray the descaler on the entire filter surface and leave it to take effect. In case of stubborn coats place one layer of kitchen roll onto the filter surface and spray descaler on it to ensure the filter is moist. Leave the descaler to take effect overnight. Then clean the filter under running water with a fine brush.

### Cleaning the filter **C** daily

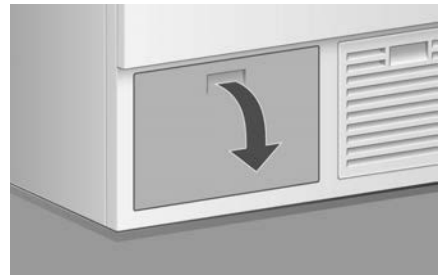

- ▶ Open the maintenance hatch.

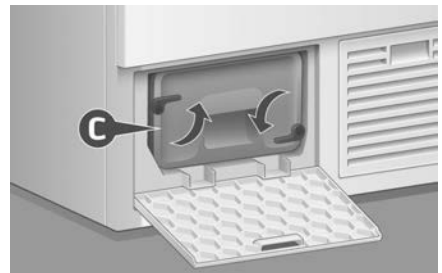

- ▶ Turn the blue locking levers towards each other in the direction of the arrows.



- ▶ Remove the filter **C**.



- ▶ Use your hand or a damp cloth to extract all the fluff that has collected on the inside of the filter.
- ▶ Replace the filter and relock with the blue locking levers.
- ▶ Close the maintenance hatch.

---


### Notice

- ▶ Never operate the machine with damaged fluff filters. Fluff filters are consumables and replacements can be ordered from our customer service department.
- 

## Cleaning the air filter

- ▶ Use your hand or a damp cloth to extract all the fluff and dust that has collected on the inside of the ventilation flap.

### Clean the air filter **D** once a week

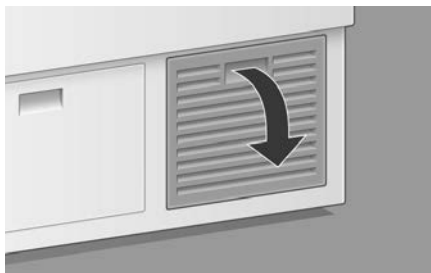


- ▶ Open the cooling grid.



- ▶ Remove the air filter **D** by pushing it slightly upwards and then pulling it diagonally downwards.




- ▶ Rub your hand over the air filter to remove the fluff.

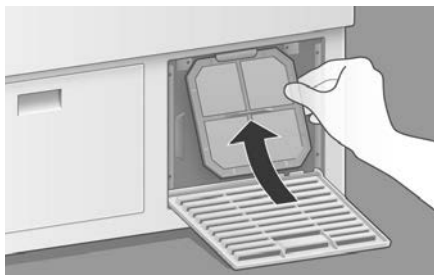

- ▶ Replace the air filter and close the cooling grid.

## Switching off the machine


- ▶ Press button **On / Off**  until the display turns off.
- ▶ Unplug the machine, when not used for longer periods of time.

 

# Programme survey

 Always check the care symbols on the fabrics




h:min = Duration / rpm = Spin speeds / kWh = Power consumption (Approximate values)



## Most efficient programme for cotton textiles according to regulation (EU) no. 932 / 2012

The following standard programme (marked with ) is suitable for drying normally wet cotton textiles and is most efficient regarding the combined energy consumption.

		h:min	rpm	kWh
8,0 kg	<b>Cotton Cabinet dry</b> 			
	Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks ▶ For laundry which will not be ironed	<b>1:48</b>	1000	2,0
Programme settings for testing and energy labelling according to directive 2010 / 30 / EU				









## Cotton and line

		h:min	rpm	kWh
8,0 kg	<b>Cotton Mangle moist</b>			
	Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks ▶ For laundry which will not be ironed	<b>0:47</b> <b>0:43</b> <b>0:39</b>	1200 1400 1600	1,2 1,1 1,0
8,0 kg	<b>Cotton Iron damp</b>			
	Bed and table linen, towels, T-shirts, polo shirts, work wear ▶ For laundry to be ironed	<b>1:03</b> <b>0:57</b> <b>0:52</b>	1200 1400 1600	1,4 1,3 1,2
8,0 kg	<b>Cotton Slightly dry</b>			
	T-shirts, polo shirts, dresses, trousers, work wear, underwear ▶ For laundry which will not be ironed or only lightly ironed	<b>1:17</b> <b>1:10</b> <b>0:63</b>	1200 1400 1600	1,8 1,6 1,5

		h:min	rpm	kWh
8,0 kg	<b>Cotton Cabinet dry</b>			
	Terry towels, tea towels, hand towels, bed linen, underwear, cotton socks ▶ For laundry which will not be ironed	<b>1:25</b> <b>1:17</b> <b>1:10</b>	1200 1400 1600	1,9 1,7 1,5
8,0 kg	<b>Cotton Extra dry</b>			
	Towelling bathrobes and bed linen (no underwear or socks) ▶ For particularly thick or multilayered fabrics	<b>1:37</b> <b>1:28</b> <b>1:20</b>	1200 1400 1600	2,3 2,1 1,9

## Easy care laundry

Non-iron synthetic and mixed fibres and cotton with non-iron trim, e.g. viscose, cupro, modal, polyester

		h:min	rpm	kWh
4,0 kg	<b>Easy care Iron damp</b>			
 	Anoraks, covers ▶ For laundry to be ironed	<b>0:32</b> <b>0:27</b>	600 800	0,8 0,7
4,0 kg	<b>Easy care Slightly dry</b>			
 	Shirts, blouses, sportswear, bed and table linen, sweat suits ▶ For laundry which will not be ironed or only lightly ironed	<b>0:39</b> <b>0:33</b>	600 800	0,9 0,8
4,0 kg	<b>Easy care Cabinet dry</b>			
 	Trousers, dresses, skirts, shirts, blouses, corsetry, leggings, sportswear with large proportion of synthetic fibres ▶ For laundry which will not be ironed	<b>0:46</b> <b>0:39</b>	600 800	1,0 0,9
4,0 kg	<b>Easy care Extra dry</b>			
 	Trousers, dresses, skirts, shirts ▶ For particularly thick or multilayered fabrics	<b>0:52</b> <b>0:44</b>	600 800	1,3 1,1

## Time drying

h:min rpm kWh

8,0 kg

### Time drying



For extra drying time for multi-layer textlies (e.g. sleeping bags) or for drying single laundry items, such as for example terry towelling

▶ Time drying warm (10 min – 2 h 30 min)

– – –

1,6 kg

### Reconditioning



The laundry is aired without adding additional temperature

▶ Time drying cold (10 min – 1 h 30 min)

– – –



## Mixed laundry

h:min rpm kWh

4,0 kg

### Mixed laundry Cabinet dry



For mixed laundry made of cotton and easy care textiles (e.g. sportswear and terry towelling)

▶ For laundry which will not be ironed or only lightly ironed

**0:48** 800 1,2



## Additional programmes

h:min rpm kWh

3,0 kg

### Shirts, blouses Iron damp



Shirts and blouses (max. eight pieces of clothing)

▶ The programme reduces creasing, is gentle to the laundry and facilitates ironing

**0:46** 600 0,8

4,0 kg

### Jeans Cabinet dry



Jeans

▶ Jeans are dried completely

**1:39** 600 2,2  
**1:24** 800 1,9

3,2 kg







### Synthetics Cabinet dry



Silk, delicates, lingerie, curtains and the likes

**0:55** 600 0,9



		h:min	rpm	kWh
2,6 kg	<b>Wool finish Fleece dry</b>			
	Machine washable fabrics made of or containing wool Wool mark stating «non-felting» or «machine washable» ▶ Remove the laundry immediately after the programme has ended and place it on a flat terry towel for drying ▶ The laundry becomes more fluffy, but is not dried	<b>0:05</b>	800	0,1
3,0 kg	<b>Sportswear, outdoor Cabinet dry</b>			
	Sports and leisure jackets, weather gear, ski wear	<b>1:11</b>	800	1,0
2,4 kg	<b>Down, pillows Time drying</b>			
	Down textiles (e.g. jackets, coats, pillows and light blankets) ▶ Time drying warm (50 min – 2 h 30 min)	–	–	–
8,0 kg	<b>Terry towels Extra dry</b>			
	Terry towels, bath towels, bathrobes etc. made of cotton	<b>1:36</b> <b>1:27</b> <b>1:18</b>	1200 1400 1600	2,3 2,1 1,9
3,0 kg	<b>Impregnating Extra dry</b>			
	Newly impregnated sports and leisure jackets, weather gear, ski wear ▶ Machine drying sets the impregnant ▶ Dry down ski jackets and pants inside out	<b>1:27</b>	800	1,2
8,0 kg	<b>Bed linen Cabinet dry</b>			
	Cotton sheets, fitted sheets, duvet covers, pillow cases etc. ▶ Button or zip up duvet covers and pillow cases.	<b>2:07</b> <b>1:56</b> <b>1:44</b>	1200 1400 1600	2,7 2,5 2,3

# Special programmes

---

## Mixed laundry



This programme is optimised for drying mixed laundry made of cotton and synthetic.

## Additional programmes




Use these programmes for best results when drying a variety of textiles, such as e.g. shirts, blouses, jeans, wool etc.

# Programme options

---

- ▶ By also selecting one or more options, a wash programme can be specifically tailored to the particular characteristics of the laundry.
- ▶ Programme options are only activated for the duration of the current wash programme.

Long-term modifications can be made in the user settings (Menu  **Settings**) and stay activated until they are changed again.

---

### Notice

The programme options **Gentle plus** and **Antibac** are mutually exclusive.

---

## Antibac



Choosing the option **Antibac** extends the additional drying phase, which can kill harmful bacteria to a great extent.

- ▶ Only use **Antibac** for textiles that are not temperature-sensitive.

## Gentle plus



For gentle drying of particularly sensitive textiles. The temperature is reduced.

## Reverse +



Changing the direction of the spin can prevent washing from rolling up or getting tangled, and ensures it dries evenly.

- ▶ Choose this option if you wish to dry large items of laundry such as bedlinen.

## Time preset



- ▶ With the option **Time preset** the start time of the programme can be delayed and thus suit your lifestyle (e.g. taking advantage of cheaper night-time electricity).

---

### Notice

Check, if the time on the machine is set correctly (see **Settings / Menu Settings / Time**).


---

- ▶ First select the desired programme.
- ▶ Press the symbol button **Time preset**.

Programme end		04.09. 13:15h
-	Date	+
-	Time	+
Reset		OK

- ▶ Enter date and time for the programme end by tapping the light bar (15 min-steps).
- ▶ Confirm the entry with **OK** and press **START**.

The preset time starts. The remaining time until programmes start is displayed

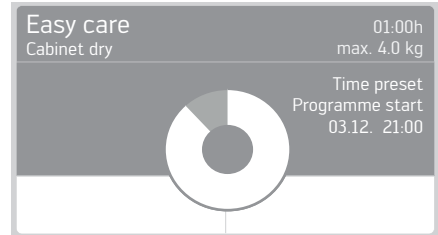

- ▶ The selected programme starts automatically when the start time is reached.
- ▶ Pressing the start button again cancels time preset and the washing programme can be started immediately.

## Drying +

With this option the dryness level can be increased temporarily – for the duration of the selected programme.

---

### Notice


To increase the dryness level in general (for all programmes), the function **Dryness level increased** must be activated in the user settings (see **Settings / Dryness level increased**).

---

## Time

When calling up timed programmes, the minimum programme duration is displayed.

- ▶ The drying time can be adjusted to the kind and amount as well as the dryness level of the laundry.

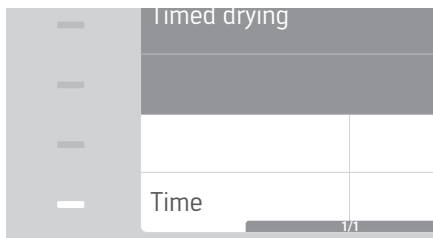

- ▶ Increase the programme duration by tapping the light bar next to **Time** (5 min steps).

## Express

For drying reduced laundry loads or single items made of cotton, synthetic or mixed fabrics.

## ECO

If you are not in a hurry, use the economic drying option. Uses up to 10 % less electricity.

# Settings

---

Your washing machine has default settings from the factory. The settings can be adapted to the users individual needs either when first used or later using the following functions.


The settings can only be changed if no wash programme is running.

---

## Notice


Certain settings on your machine can be blocked. However, the **language** (temporary), **time** and **date** functions are always available.

---

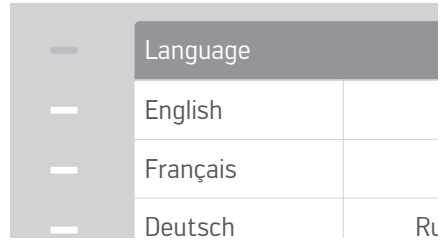

- ▶ Select the desired language. Additional menu pages can be opened by pressing the **arrow buttons**





Pressing the button **Back in the menu**  ends the menu **Language**.

## Language (temporarily)



A second language can be selected temporarily via the **Language** menu.

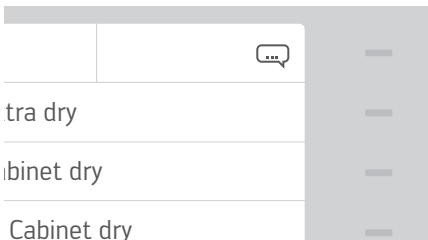

- ▶ Tap the light bar next to . The menu **Language** is displayed.

---


## Notice

This language will remain active until the machine is switched off or goes into standby.


---

## Menu Settings


\* = Default settings

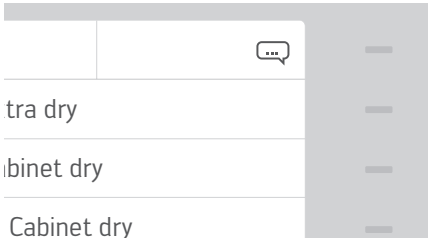

- ▶ Press the light bar next to  until the menu **Settings** is displayed.

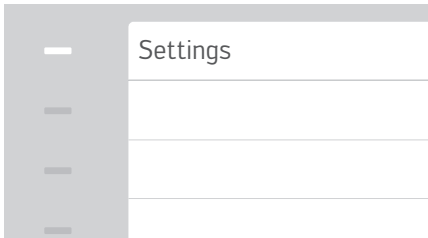

- ▶ Tap the light bar next to **Settings**. The menu **Data/Time** is displayed.

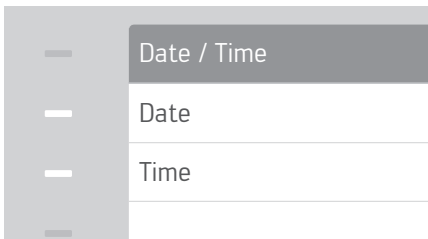

- ▶ Select the desired setting.

## Data

### ▶ Default settings

By pressing the **+** and **-** on the light bar, you can change the month and day (keep finger pressed to scroll rapidly)

- ▶ Confirm entry by pressing the light bar next to **OK**.


## Time

### ▶ Default settings


By pressing the **+** and **-** on the light bar, you can change the hour and minute (keep finger pressed to scroll rapidly)


- ▶ Confirm entry by pressing the light bar next to **OK**.

## Save changes

Pressing the button **Back in the menu**  (or after no more than 2 minutes after the last entry) ends the menu **Data/Time**.

Changes must be confirmed when exiting the menu.

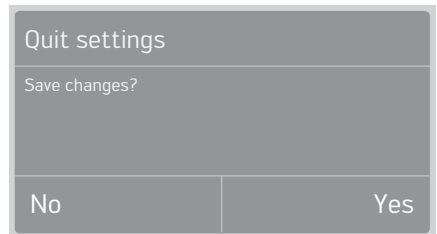

Pressing the button **Back in the menu**  (or after no more than 2 minutes after the last entry) ends the menu **Settings**.

## More settings

The following settings are not available for all appliances.

### Language

▶ **Deutsch \***

▶ **.....**

Additional menu pages can be opened by pressing the **arrow buttons**



- ▶ Select the desired language by tapping the light bar.

### Daylight savings / standard time

▶ **On \***

▶ **Off**

The automatic change of the time display to daylight savings time can be turned off.

### Display programme time

▶ **Duration \***

The display shows the remaining time of the programme.

▶ **End**

The display shows when the programme will be finished.

## Brightness display

▶ **50 \***

The background light intensity can be continuously adjusted from 20 to 100 % (hold bar for fast forward).

Confirm entry with **OK**.

## Signal tone volume

▶ **Off**

▶ **Volume 1**

▶ **Volume 2**

▶ **Volume 3 \***

▶ **Volume 4**

▶ **Volume 5**

The signal tone can be adjusted in 5 steps or set on silent.

## Button tone

▶ **On \***

▶ **Off**

The button tone can be turned off.

## Dryness level raised

▶ **Off \***

▶ **+ 1**

▶ **+ 2**

▶ **+ 3**

The dryness level can be adjusted as a general setting. Then it affects all programmes until the next change in settings.

To increase the dryness level only for the duration of the selected programme, select the option **Drying +**.


## Child lock

### ▶ Off \*

### ▶ On

The child lock is to prevent accidental starting, changing or deletion of a programme by small children.

### Input with child lock activated

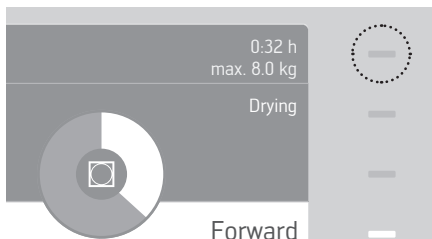

- ▶ Hold the **light bar in the upper right** pressed down (**is not lit!**).
- ▶ At the same time press the desired button.

## Crease protection

### ▶ Off

### ▶ 30 min \*

### ▶ 6 h

At the end of the programme a crease protection phase (loosening up of laundry) for 30 minutes or 6 hours can be set.

## Switching off the machine

Settings for switching of the machine automatically:

### ▶ Off

Machine always remains switched on.

### ▶ On \*

The machine is automatically switched off, when the programme has ended or when there is no further action taken after turning the machine on.

### ▶ Standby+

No function.

### ▶ Standby

The machine remains in standby mode. The display goes dark.

---

## Waking up machine

- ▶ Press button **On / Off**  .
- 

## Automatic door opening


### ▶ Off \*

### ▶ On

If this function is switched on, the door will open automatically at the end of the programme.

## Default settings

The settings can be reset to default (state as delivered).

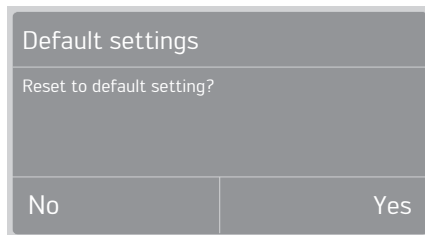


- ▶ Confirm the reset with **Yes**. All settings are reset to default.



# Cash-Card / Prepaid Card

## Selecting the programme

- ▶ Select the desired programme (see **Drying / Selecting programme and starting**).

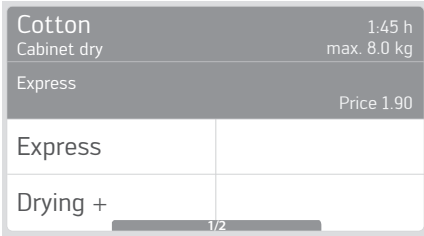


The selected programme will appear in the display together with duration, maximum load, selected options and the according programme price.

## Starting the programme

- ▶ Press button **START** and insert the user card.

The programme price will be deducted and the remaining credit will appear in the display.

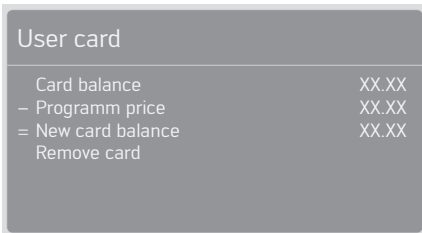


Once payment has been debited, the programme begins.

- ▶ Remove the user card.


## Insufficient credit on card

If there is not enough credit on the user card to cover the programme price, the following message will appear in the display.

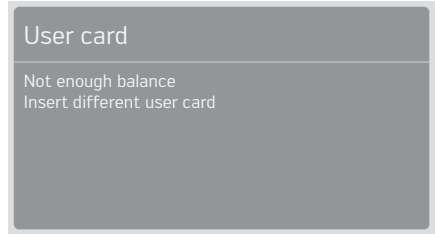

A second user card can be used to make up the balance..

## Top up user card

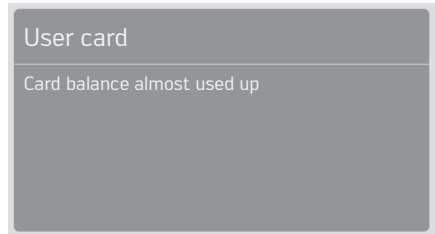

When this message appears, credit needs to be topped up on the card before it can be used again.

- ▶ See **Instructions for the use | Payment system**.

# Cleaning and Maintenance

---

## **Caution**

Danger of electric shock!

- ▶ Switch off the power supply to the machine before cleaning.
- ▶ Under no circumstances spray the machine with water.
- ▶ Do not use a steam cleaner.

---

## **Notice**

Solvents can damage parts of the machine, produce poisonous vapour and carry the risk of explosion.

Do not use cleaning agents containing solvents.

---

## **Cleaning the machine**

- ▶ Do not use abrasive cleaning agents.
- ▶ Never scratch or scrape with sharp objects.
- ▶ Casings and control areas should only be cleaned with soap or a commercially available, solvent-free, non-abrasive cleaning product.

---

## **Notice**


- ▶ Never use steel wool!
- 

## **Cleaning the fluff filters**


See **Drying / Cleaning the fluff filters**.

## **Cleaning the filter holder**

From time to time it is necessary to remove fluffs that have accumulated inside the filter holder. To do so, use a vacuum cleaner or a cleaning brush.

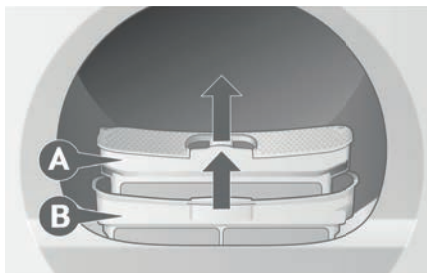


- ▶ Pull both filters out of the filter holder.

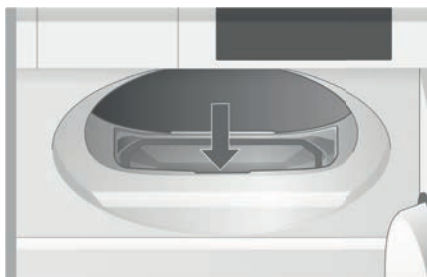

- ▶ Run the pipe of the vacuum cleaner or the brush around the well of the filter holder.
- ▶ Remove any residual fluff.
- ▶ Replace the two filters properly.

## Cleaning the moisture sensor

After longer operation, small deposits (lime, fabric refiner) can form on the front inner side of the drum on both sides of the longish moisture sensors. With moisture controlled programmes, this can result in the desired level of dryness not being reached.

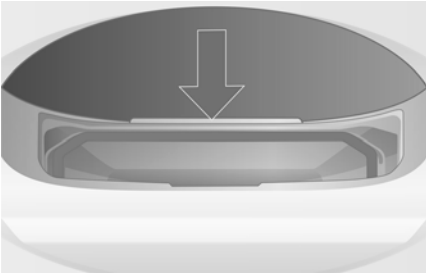

- ▶ Wipe deposits away with a cloth soaked in vinegar.

## Emptying for frost protection or transport

If the machine is in a room susceptible to frost or is to be transported, it must be completely emptied.


- ▶ Start any programme.
- ▶ Press the light bar next to **Forward** repeatedly until **Self-cleaning** is displayed.
- ▶ Allow the programme to finish (without crease protection).

## Self-cleaning



The dryer is equipped with an automatic self-cleaning function.

At the end of each programme and also during the drying process, if necessary, the heat exchanger is cleaned.

A slight knocking noise can be heard during the cleaning process and the self-cleaning symbol  is displayed

# Problems



---






## **Warning**

**Improper repairs can result in severe accidents, damages and operation malfunctions!**

Do not make any changes, manipulations or attempt repairs using tools such as screw-drivers, etc.

### ERROR MESSAGES


<b>Child lock active</b>	<ul style="list-style-type: none"><li>▶ Hold the bar in the upper right (<b>is not lit!</b>) and at the same time press the desired button.</li></ul>
<b>Check drain</b>	<p>Condensate water pump is not running.</p> <ul style="list-style-type: none"><li>▶ Check if the water discharge hose is bent or the water discharge provided by the customer is clogged. After rectifying the error, the programme can be continued from the point at which it was interrupted.</li><li>▶ Press the light bar next to <b>Continue</b>.</li></ul>
<b>Close door</b>	<p>The start button has been operated before the door has been closed.</p> <ul style="list-style-type: none"><li>▶ Close the door and press <b>START</b>.</li></ul>
<b>Clean fluff filter</b> Displayed while programme is running	<ul style="list-style-type: none"><li>▶ Press button <b>Open the door</b> . The loading door springs open.</li><li>▶ Clean the fluff filters (see <b>Drying / Cleaning the fluff filters</b>).</li><li>▶ Close the door and press the light bar next to <b>Continue</b>.</li></ul>
Displayed after programme end	<ul style="list-style-type: none"><li>▶ Acknowledge the error message with <b>OK</b>.</li><li>▶ Clean the fluff filters (see <b>Drying / Cleaning the fluff filters</b>).</li></ul>
<b>Clean filter «C»</b>	<ul style="list-style-type: none"><li>▶ Clean the fluff filter  behind the service flap (see <b>Drying / Cleaning the fluff filters</b>).</li><li>▶ Close the maintenance hatch and press the light bar next to <b>OK</b>.</li></ul>

<b>Insert filter «C»</b> Displayed at start	<ul style="list-style-type: none"> <li>▶ Ensure the fluff filter  is placed correctly behind the service flap.</li> <li>▶ Press button .</li> </ul>
Displayed while programme is running	<ul style="list-style-type: none"> <li>▶ Ensure the fluff filter  is placed correctly behind the service flap.</li> <li>▶ Press the light bar next to <b>Continue</b>.</li> </ul>
<b>Error door lock</b>	<ul style="list-style-type: none"> <li>▶ Wait one minute</li> <li>▶ Press again button <b>Open the door</b> .</li> <li>▶ If the door cannot be opened after the programme has ended, contact customer service.</li> </ul>
<b>Programme stopped</b>	<p>Button <b>On / Off</b>  was pressed during a running programme.</p> <ul style="list-style-type: none"> <li>▶ Press the light bar next to <b>Continue</b>.</li> </ul>

## ERROR MESSAGES CASH-CARD / PREPAID CARD

<b>Turn card</b>	<ul style="list-style-type: none"> <li>▶ Turn the card over.</li> </ul>
<b>Not enough balance</b> <b>Insert different user card</b>	<p>There is not enough credit on the card.</p> <ul style="list-style-type: none"> <li>▶ Use a card which has credit.</li> </ul>
<b>Wrong user number or card type</b>	<p>This card is not valid.</p> <ul style="list-style-type: none"> <li>▶ Please contact the person in charge.</li> </ul>
<b>Cannot read card</b>	<p>This card cannot be read.</p> <ul style="list-style-type: none"> <li>▶ Try inserting the card again or contact the person in charge.</li> </ul>
<b>Wrong laundry room number</b>	<p>This user card is not valid for this laundry room.</p>
<b>This card could not be read.</b>	<p>This card could not be read.</p> <ul style="list-style-type: none"> <li>▶ Please insert the card again.</li> </ul>
<b>Card balance almost used up</b>	<p>The credit on this card is sufficient only for the programme you have selected.</p>

## MACHINE OPERATION

**Machine does not start when pressing the On / Off  button**

- ▶ Check whether the mains power is switched on (wall / plug).
- ▶ Check whether all the fuses are intact or the safety switch has tripped.

---

Mains blockage (generally at noon).

- ▶ Operate the machine after the mains blockage has ended.
- ▶ If the dryer does not start despite correct power supply, contact customer service.

---

**The dryer does not start**

- ▶ Press button **START**.
- ▶ If the programme does not start despite pressing the start button, contact customer services.

---

### Notice

When time preset is activated, the programme starts only at the pre-selected time.

---

**The drying target was not achieved**

When warm, laundry feels more moist than it actually is!

- ▶ Remove the laundry from the dryer and let it cool.

---

When still moist:

- ▶ Clean the fluff filters (see **Drying / Cleaning the fluff filters**).
- ▶ Increase degree of drying (see **Settings / Dryness level raised**).
- ▶ Clean the moisture sensor (see **Cleaning and Maintenance / Cleaning the moisture sensor**).

---

**The individual laundry piece does not reach the set drying target**

- ▶ If one single piece is to be dried in the dryer, it will be dried more evenly by adding additional pieces, e.g. two terry towels or using the **Express** programme option.

---

**The drying takes too long**

- ▶ Clean the fluff filters (see **Drying / Cleaning the fluff filters**).

---

Power failure.

- ▶ Note lock times of EW.

---

**The laundry is not dry after the maximum possible settings**

Drum is overloaded.

- ▶ Observe the maximum loads in the programme table.

---

Insufficient room ventilation.

- ▶ Open a window or door.

	<p>The fluff filters are blocked with fluff or scale deposits.</p> <ul style="list-style-type: none"> <li>▶ Clean the fluff filters (see <b>Drying / Cleaning the fluff filters</b>).</li> </ul>
<b>Laundry gets tangled</b>	<ul style="list-style-type: none"> <li>▶ Select the special programme «Bed linen» or «Terry towels».</li> <li>▶ Use the <b>Reverse +</b> programme option</li> </ul>
<b>Drum lighting does not work</b>	<p>The LED is defective.</p> <p>For safety reasons the LED must only be replaced by the customer service or a qualified specialist.</p>
<b>Dampness in the room increases significantly</b>	<p>The room does not have sufficient ventilation</p> <ul style="list-style-type: none"> <li>▶ Ensure adequate ventilation.</li> </ul>
<b>Water on the floor</b>	<ul style="list-style-type: none"> <li>▶ Check, the drain hose for leakage and proper installation.</li> </ul>
<b>Odour accumulation</b>	<p>If the machine is not used regularly (e.g., in a holiday home) or only used for small quantities, fluff may accumulate in the drain system.</p> <ul style="list-style-type: none"> <li>▶ Pull the fluff filters <b>A</b> and <b>B</b> out of the filter holder (see <b>Cleaning and Maintenance / Cleaning the filter holder</b>).</li> <li>▶ Pour 1.5l tap water into the opening of the filter holder.</li> <li>▶ Start the <b>Cotton cabinet dry</b> programme.</li> <li>▶ Press the <b>Forward</b> light bar several times until <b>Self-cleaning</b> appears in the display.</li> <li>▶ Complete the drying cycle (without crease protection).</li> <li>▶ Replace the fluff filters</li> </ul>

## ERROR MESSAGES F --

«Error F--»  
is displayed

- ▶ Acknowledge the error message with **OK**.  
Machine restarts.
- ▶ Select a programme again and press button **START**.

«Error F--»  
is displayed again  
despite programme  
restart

- ▶ Acknowledge the error message with **OK**.
- ▶ Interrupt the power supply for one minute (switch the main switch off and on again). As soon as the display lights, the appliance is again ready to operate.
- ▶ Select again a programme and press button **START**.

«Error F--»  
is displayed again  
after interruption  
of the power supply

- ▶ Note the error message.
- ▶ Switch off the power supply.
- ▶ Contact customer service (see **Customer service**).



# Technical specifications

## Product data sheet for household washing dryer

according to EC regulation no. 392 / 2012

### Schulthess

Model name / label	Spirit topLine 830	
Nominal capacity <sup>1)</sup>	kg	8,0
Dryer type	Heat pump dryer	
Energy efficiency class A+++ (highest efficiency) to D (lowest efficiency)	A++	
Weighted annual energy consumption <sup>2)</sup>	kWh/year	236
Dryer	with automatic	
Energy consumption of the standard cotton programme		
Energy consumption full load	kWh	1,99
Energy consumption partial load	kWh	1,07
Power consumption in off-mode	W	0,14
Power consumption in left-on mode <sup>3)</sup>	W	0,14
Duration of the left-on mode <sup>4)</sup>	min	5
Standard programme, to which the information in the label and the data sheet relates <sup>5)</sup>	☐ Cotton Cabinet dry	
Weighted programme duration of the standard cotton programme	min	83
Programme duration at full load	min	108
Programme duration at partial load	min	64
Condensation efficiency class A (highest efficiency) to D (lowest efficiency)	A	
Average condensation efficiency of the standard cotton programme at full load	%	90
Average condensation efficiency of the standard cotton programme at partial load	%	92
Weighted condensation efficiency of the standard cotton programme at full load and partial load	%	91
Airborne acoustical noise <sup>6)</sup>	dB(A) re 1 pW	66

<sup>1)</sup> In kg Cotton for the standard programme at full load.

<sup>2)</sup> Based on 160 standard drying cycles for the standard cotton programme at full load and partial load as well as the consumption of operating modes with low power consumption. The actual power consumption per cycle depends on how the machine is used.

<sup>3)</sup> 3,91 W, if the machine is not configured to automatically turn off.

<sup>4)</sup> If the household laundry dryer is equipped with power control.

<sup>5)</sup> This programme is suitable for drying normal, wet cotton textiles and is most efficient regarding energy consumption for cotton.

<sup>6)</sup> For the standard cotton programme at full load.

## Customer service

---

Check whether you can correct the fault yourself before you call customer service (see chapter **Problems**).

If advice is required, costs may be incurred if a service technician is required, even during the guarantee period.

The guarantee does not cover faults caused by improper use and by blocked filters or foreign bodies.

If you cannot repair a malfunction yourself, disconnect the power supply (switch of the main switch / fuse at installation site) and call customer service.

Call the central customer service number. You will be automatically connected to the customer services branch for your region.

### 24 h telephone service:

**Tel. 0844 888 222**

**Fax 0844 888 223**

Give customer services the error message F-- and the product and appliance number of your dryer.

You will find this information on the type label inside the opened door.

**Product number**

---

**Appliance number**

---

## Warranty subscription

---

After the normal warranty period of 2 years has expired, it is possible to extend the warranty by means of a warranty subscription.

We are happy to send you the requested documents.

Please observe the enclosed guarantee and customer services booklet.



**Headquarters and Production**





Schulthess Maschinen AG  
Landstrasse 37, 8633 Wolfhausen ZH  
Tel. + 41 (0) 55 253 51 11  
info@schulthess.ch  
www.schulthess.ch

**Austria**


Schulthess Maschinen GmbH  
A-1130 Wien, Hetzendorferstrasse 191  
Tel. + 43 (0) 1 803 98 00  
www.schulthess.at

## Brief instruction

Follow the safety instructions in this manual!

- ▶ Turn on the power switch and open the water tap.
- ▶ Press button **On / Off** .
- ▶ Press button **Open the door** .
- ▶ Select the programme and the programme options (go backwards or forwards with the **arrow buttons**  .
- ▶ Add laundry and close the loading door.
- ▶ Press button **START**.

**At the end of the programme**

- ▶ Press button **Open the door**  and remove the laundry.
- ▶ Clean the fluff filters.



WT 14 MFH W